



Connections / 腳位圖 / 脚位图

_A2043 & _K2043	20S_ / 30S_ / 40S_	COM1 & COM3 5 Pin Terminal / 5 Pin端子台 / 5 Pin端子台	 Pin 5 4 3 2 1
	30S_	COM2 5 Pin Terminal / 5 Pin端子台 / 5 Pin端子台	 Pin 5 4 3 2 1
	40S_ (選購/選購/Optional)	COM2 & COM4 5 Pin Terminal / 5 Pin端子台 / 5 Pin端子台	 Pin 5 4 3 2 1

_A2070 & _A2100 & _K2070 & _K2100	20S_ (選購/選購/Optional)	COM1 & COM2 DB-9 Female / DB-9 母座 / DB-9 母座		<table border="1"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>1</td><td>RS422 TXD+ / RS485 + (COM2)</td></tr> <tr><td>2</td><td>RS232 RXD (COM1)</td></tr> <tr><td>3</td><td>RS232 TXD (COM1)</td></tr> <tr><td>4</td><td>RS422 RXD+ (COM2)</td></tr> <tr><td>5</td><td>SG</td></tr> <tr><td>6</td><td>RS422 TXD- / RS485 - (COM2)</td></tr> <tr><td>7</td><td>N/A</td></tr> <tr><td>8</td><td>N/A</td></tr> <tr><td>9</td><td>RS422 RXD- (COM2)</td></tr> </tbody> </table>	Pin	Description	1	RS422 TXD+ / RS485 + (COM2)	2	RS232 RXD (COM1)	3	RS232 TXD (COM1)	4	RS422 RXD+ (COM2)	5	SG	6	RS422 TXD- / RS485 - (COM2)	7	N/A	8	N/A	9	RS422 RXD- (COM2)
	Pin	Description																						
	1	RS422 TXD+ / RS485 + (COM2)																						
2	RS232 RXD (COM1)																							
3	RS232 TXD (COM1)																							
4	RS422 RXD+ (COM2)																							
5	SG																							
6	RS422 TXD- / RS485 - (COM2)																							
7	N/A																							
8	N/A																							
9	RS422 RXD- (COM2)																							
30S_	COM1 & COM2 & COM3 DB-9 Female / DB-9 母座 / DB-9 母座		<table border="1"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>1</td><td>RS422 TXD+ / RS485 + (COM2)</td></tr> <tr><td>2</td><td>RS232 RXD (COM1)</td></tr> <tr><td>3</td><td>RS232 TXD (COM1)</td></tr> <tr><td>4</td><td>RS422 RXD+ (COM2)</td></tr> <tr><td>5</td><td>SG</td></tr> <tr><td>6</td><td>RS422 TXD- / RS485 - (COM2)</td></tr> <tr><td>7</td><td>RS485 - (COM3)</td></tr> <tr><td>8</td><td>RS485 + (COM3)</td></tr> <tr><td>9</td><td>RS422 RXD- (COM2)</td></tr> </tbody> </table>	Pin	Description	1	RS422 TXD+ / RS485 + (COM2)	2	RS232 RXD (COM1)	3	RS232 TXD (COM1)	4	RS422 RXD+ (COM2)	5	SG	6	RS422 TXD- / RS485 - (COM2)	7	RS485 - (COM3)	8	RS485 + (COM3)	9	RS422 RXD- (COM2)	
Pin	Description																							
1	RS422 TXD+ / RS485 + (COM2)																							
2	RS232 RXD (COM1)																							
3	RS232 TXD (COM1)																							
4	RS422 RXD+ (COM2)																							
5	SG																							
6	RS422 TXD- / RS485 - (COM2)																							
7	RS485 - (COM3)																							
8	RS485 + (COM3)																							
9	RS422 RXD- (COM2)																							
40S_ (選購/選購/Optional)	COM1 & COM2 & COM3 & COM4 DB-9 Female / DB-9 母座 / DB-9 母座		<table border="1"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>1</td><td>RS485 + (COM2)</td></tr> <tr><td>2</td><td>RS232 RXD (COM1)</td></tr> <tr><td>3</td><td>RS232 TXD (COM1)</td></tr> <tr><td>4</td><td>RS485 + (COM4)</td></tr> <tr><td>5</td><td>SG</td></tr> <tr><td>6</td><td>RS485 - (COM2)</td></tr> <tr><td>7</td><td>RS485 - (COM3)</td></tr> <tr><td>8</td><td>RS485 + (COM3)</td></tr> <tr><td>9</td><td>RS485 - (COM4)</td></tr> </tbody> </table>	Pin	Description	1	RS485 + (COM2)	2	RS232 RXD (COM1)	3	RS232 TXD (COM1)	4	RS485 + (COM4)	5	SG	6	RS485 - (COM2)	7	RS485 - (COM3)	8	RS485 + (COM3)	9	RS485 - (COM4)	
Pin	Description																							
1	RS485 + (COM2)																							
2	RS232 RXD (COM1)																							
3	RS232 TXD (COM1)																							
4	RS485 + (COM4)																							
5	SG																							
6	RS485 - (COM2)																							
7	RS485 - (COM3)																							
8	RS485 + (COM3)																							
9	RS485 - (COM4)																							

5

_A2070 & _A2100 & _K2070 & _K2100	30R (選購/選購/Optional)	COM1 & COM2 & COM3 DB-9 Female / DB-9 母座 / DB-9 母座		<table border="1"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>1</td><td>RS422 TXD+ / RS485 + (COM2)</td></tr> <tr><td>2</td><td>RS232 RXD (COM1)</td></tr> <tr><td>3</td><td>RS232 TXD (COM1)</td></tr> <tr><td>4</td><td>RS422 RXD+ (COM2)</td></tr> <tr><td>5</td><td>SG</td></tr> <tr><td>6</td><td>RS422 TXD- / RS485 - (COM2)</td></tr> <tr><td>7</td><td>RS232 TXD (COM3)</td></tr> <tr><td>8</td><td>RS232 RXD (COM3)</td></tr> <tr><td>9</td><td>RS422 RXD- (COM2)</td></tr> </tbody> </table>	Pin	Description	1	RS422 TXD+ / RS485 + (COM2)	2	RS232 RXD (COM1)	3	RS232 TXD (COM1)	4	RS422 RXD+ (COM2)	5	SG	6	RS422 TXD- / RS485 - (COM2)	7	RS232 TXD (COM3)	8	RS232 RXD (COM3)	9	RS422 RXD- (COM2)
	Pin	Description																						
	1	RS422 TXD+ / RS485 + (COM2)																						
2	RS232 RXD (COM1)																							
3	RS232 TXD (COM1)																							
4	RS422 RXD+ (COM2)																							
5	SG																							
6	RS422 TXD- / RS485 - (COM2)																							
7	RS232 TXD (COM3)																							
8	RS232 RXD (COM3)																							
9	RS422 RXD- (COM2)																							
40R (選購/選購/Optional)	COM1 & COM2 & COM3 & COM4 DB-9 Female / DB-9 母座 / DB-9 母座		<table border="1"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>1</td><td>RS485 + (COM2)</td></tr> <tr><td>2</td><td>RS232 RXD (COM1)</td></tr> <tr><td>3</td><td>RS232 TXD (COM1)</td></tr> <tr><td>4</td><td>RS485 + (COM4)</td></tr> <tr><td>5</td><td>SG</td></tr> <tr><td>6</td><td>RS485 - (COM2)</td></tr> <tr><td>7</td><td>RS232 TXD (COM3)</td></tr> <tr><td>8</td><td>RS232 RXD (COM3)</td></tr> <tr><td>9</td><td>RS485 - (COM4)</td></tr> </tbody> </table>	Pin	Description	1	RS485 + (COM2)	2	RS232 RXD (COM1)	3	RS232 TXD (COM1)	4	RS485 + (COM4)	5	SG	6	RS485 - (COM2)	7	RS232 TXD (COM3)	8	RS232 RXD (COM3)	9	RS485 - (COM4)	
Pin	Description																							
1	RS485 + (COM2)																							
2	RS232 RXD (COM1)																							
3	RS232 TXD (COM1)																							
4	RS485 + (COM4)																							
5	SG																							
6	RS485 - (COM2)																							
7	RS232 TXD (COM3)																							
8	RS232 RXD (COM3)																							
9	RS485 - (COM4)																							
20Q_	COM1 & COM2 DB-9 Female / DB-9 母座 / DB-9 母座		<table border="1"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>1</td><td>RS485 + (COM2)</td></tr> <tr><td>2</td><td>RS232 RXD (COM1)</td></tr> <tr><td>3</td><td>RS232 TXD (COM1)</td></tr> <tr><td>4</td><td>N/A</td></tr> <tr><td>5</td><td>SG</td></tr> <tr><td>6</td><td>RS485 - (COM2)</td></tr> <tr><td>7</td><td>N/A</td></tr> <tr><td>8</td><td>N/A</td></tr> <tr><td>9</td><td>N/A</td></tr> </tbody> </table>	Pin	Description	1	RS485 + (COM2)	2	RS232 RXD (COM1)	3	RS232 TXD (COM1)	4	N/A	5	SG	6	RS485 - (COM2)	7	N/A	8	N/A	9	N/A	
Pin	Description																							
1	RS485 + (COM2)																							
2	RS232 RXD (COM1)																							
3	RS232 TXD (COM1)																							
4	N/A																							
5	SG																							
6	RS485 - (COM2)																							
7	N/A																							
8	N/A																							
9	N/A																							
30Q_ (選購/選購/Optional)	COM1 & COM2 & COM3 DB-9 Female / DB-9 母座 / DB-9 母座		<table border="1"> <thead> <tr> <th>Pin</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>1</td><td>RS485 + (COM2)</td></tr> <tr><td>2</td><td>RS232 RXD (COM1)</td></tr> <tr><td>3</td><td>RS232 TXD (COM1)</td></tr> <tr><td>4</td><td>N/A</td></tr> <tr><td>5</td><td>SG</td></tr> <tr><td>6</td><td>RS485 - (COM2)</td></tr> <tr><td>7</td><td>RS232 TXD (COM3)</td></tr> <tr><td>8</td><td>RS232 RXD (COM3)</td></tr> <tr><td>9</td><td>N/A</td></tr> </tbody> </table>	Pin	Description	1	RS485 + (COM2)	2	RS232 RXD (COM1)	3	RS232 TXD (COM1)	4	N/A	5	SG	6	RS485 - (COM2)	7	RS232 TXD (COM3)	8	RS232 RXD (COM3)	9	N/A	
Pin	Description																							
1	RS485 + (COM2)																							
2	RS232 RXD (COM1)																							
3	RS232 TXD (COM1)																							
4	N/A																							
5	SG																							
6	RS485 - (COM2)																							
7	RS232 TXD (COM3)																							
8	RS232 RXD (COM3)																							
9	N/A																							

6

Battery Replacement Installation / 替代電池安裝說明 / 替代電池安裝說明

Please scan QR Code to download the installation guide. / 請掃描QR Code下載說明文件 / 請掃描QR Code下載說明文件

- \* Note: It will affect the product warranty, if open the rear cover and damage the "Void if torn" Warranty label. Please contact us for details. /
- \* 注意：若於產品保固期限內自行開啟產品後殼造成「撕毀保固無效」貼紙損毀將會影響產品保固。相關保固問題請跟本公司聯絡詢問 /
- \* 注意：若于产品保固期限内自行开启产品外壳造成「撕毁保固无效」贴纸损毁将会影响产品保固。相关保固问题请跟本公司联络询问



<https://reurl.cc/o9WZqM>

The products have been designed for use in an industrial environment in compliance with the 2014/30/EU directive. 本產品適用於工業環境並符合2014/30/EU 標準 / 本產品适用于工业环境并符合 2014/30/EU 标准

The products have been designed in compliance with: 本產品符合以下標準: / 本產品符合以下标准:

- EN 61000-6-4: 2007 +A1: 2011
  - EN 61000-3-2: 2014
  - EN 61000-3-3: 2013
  - EN 61000-6-2: 2005 / AC: 2005
- IEC 61000-4-2: 2008; IEC 61000-4-3: 2006 + A1: 2007 +A2: 2010;  
IEC 61000-4-4: 2012; IEC 61000-4-5: 2014 + A1: 2017; IEC 61000-4-6: 2013;  
IEC 61000-4-8: 2009; IEC 61000-4-11: 2004 + A1: 2017

The installation of these devices into the residential, commercial and light-industrial environments is allowed only in the case that special measures are taken in order to get the conformity to IEC-61000-6-3 本產品若要安裝於住宅；商業及輕工業的環境時，必須加測特殊檢驗以符合 IEC-61000-6-3 本產品若要安裝於住宅；商業及輕工業的環境時，必須加測特殊檢驗以符合 IEC-61000-6-3

Reproduction of the contents of this copyrighted document, in whole or part without writt permission of Cermate Technologies Inc., is prohibited. \

本文件內容版權為Cermate Technologies Inc.所有，非經本公司同意，請勿自行重製、拷貝或修改。 本文件内容版权为Cermate Technologies Inc.所有，非经本公司同意，请勿自行重制、拷贝或修改。



**IP SYSTEMES**  
8 rue du Colonel Chambonnet – BP67  
69672 BRON Cedex  
Tel. : 04 72 14 18 00  
Fax : 04 72 14 18 01  
[www.ip-systemes.com](http://www.ip-systemes.com) – [info@ip-systemes.fr](mailto:info@ip-systemes.fr)